

COIN SWITCH ADJUSTMENT

SHARP BLOW ON FRONT DOOR
WILL MOVE DAMPER AWAY FROM
THIS SURFACE. FORMED ARM OF
DAMPER STRIKES UPPER SWITCH
BLADE KEEPING POINTS FROM
MAKING CONTACT.

② BEND BACKING BLADE TO
ESTABLISH PROPER POINT
GAP.

.018" FOR 10¢ COIN
.032" FOR 5¢ COIN
.047" FOR 25¢ COIN

③ ADJUST THIS BLADE TO REST
AGAINST BACKING BLADE WITH
VERY LIGHT PRESSURE.
2 GRAMS MAXIMUM AT END OF
BLADE.

① ADJUST THIS BLADE AGAINST
WIRE FORM AS TIGHT AS
POSSIBLE WITHOUT RETARDING
PASSAGE OF COIN.
RECOMMEND:
5 TO 6 GRAMS FOR 10¢ COIN.
10 GRAMS FOR 5¢ COIN.
12 GRAMS FOR 25¢ COIN.

